

Instruction Manual
CiU[®]Fixed



Contents

Safety.....	3
Reception - unloading	3
Installation	4
Preparations prior to installation	4
Installation.....	5
Technical specification.....	6
Use	7
Warranty.....	7
Troubleshooting.....	7
Dismantling	7

Safety

GLASS

The glass is safety glass - toughened.

Reception - unloading


ON DELIVERY

A delivery inspection of CiU Fixed should be performed in order to discover and transport damage or other defects on the packaging and/or product. Any delivery damage must be noted on the shipping company's consignment note and ErgoSafe must be notified at the latest one week after receipt of the delivery. Thereafter, it is not possible to cite discrepancies regarding the delivery of CiU Fixed.


UNLOADING FROM PALLETS

Note that unloading must be performed in a specific order, otherwise personal injury can occur. There is also a risk of product damage. Set the pallets on a flat surface.

1. Start by removing the packaging plastic
2. Then lift off the sections that are to be installed from pallets
3. Remember to secure the sections remaining on pallets so these do not fall

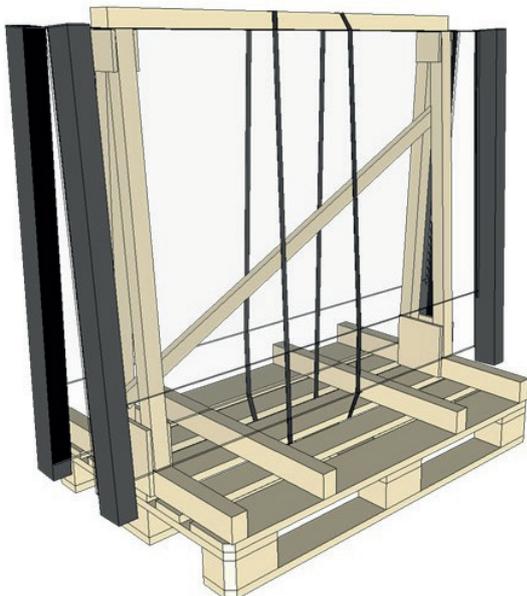


Each section is individually secured on the packaging to prevent CiU Fixed from falling during unloading.

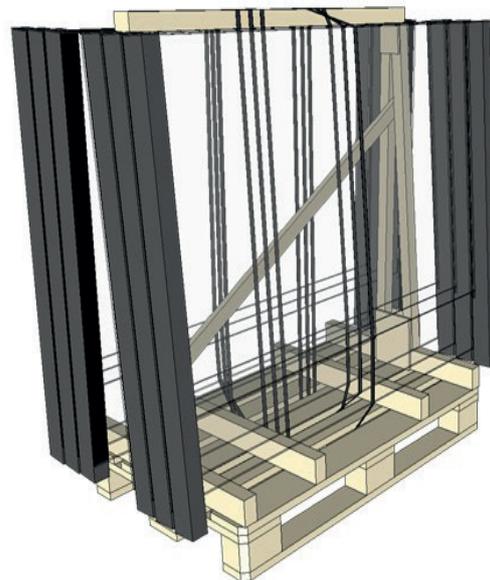

Loosen the straps gradually as CiU Fixed sections are installed. Each package can hold up to 6 CiU Fixed sections.

Installation

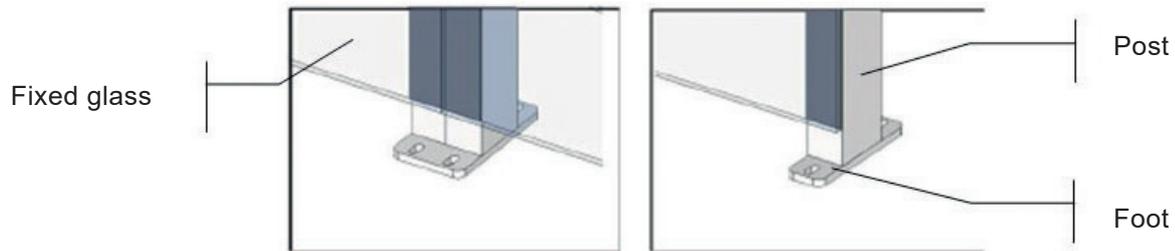


Preparations prior to installation

Below follows a description of what is important to remember when installing CiU Fixed. Read through the manual before starting to install CiU Fixed.

Each CiU Fixed section is delivered ready-assembled. Sections are linked together to form a system with the help of double cover caps and double baseplate mounts.


The substrate must be dimensioned according to applicable standards. When fastening to concrete CiU Fixed must be installed with sheet rubber against the concrete surface.


CiU Fixed is delivered complete with cover caps and baseplate mounts, single or double depending on what is specified on the order. During transport the section/sections are fitted with transport cover caps.

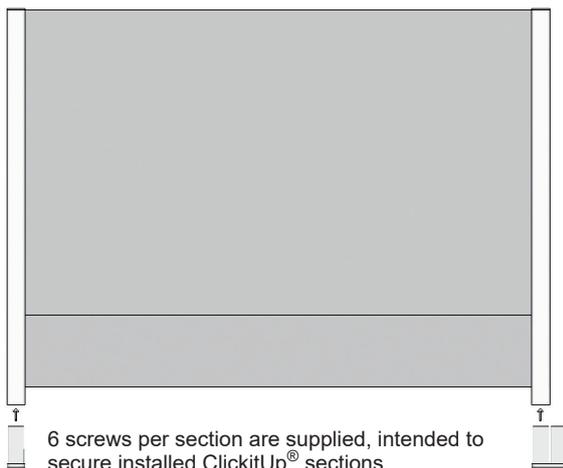

6 screws per section are supplied, intended to secure installed ClickitUp[®] sections.
Note! Screws for fastening in the substrate are not included.

 Single cover cap with 2 screws

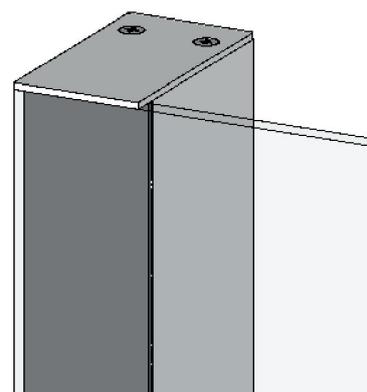




Installation



1. Install the first section

Set out a straight line where CiU Fixed is to be installed. Note that if the ground slopes the posts will be in their bottom position at the ground's highest point. Any adjustments are made as per figure 3. If corners are to be installed, start with this. Place the first section on the baseplate mounts. Use the fastening fittings on the baseplate mounts that are designed for the glass balustrades substrate. ErgoSafe encourages CiU Fixed/Balcony to be fastened to a stable substrate, concrete or timber joists. Once the first section is in position, prepare single/double mounts for the next section.

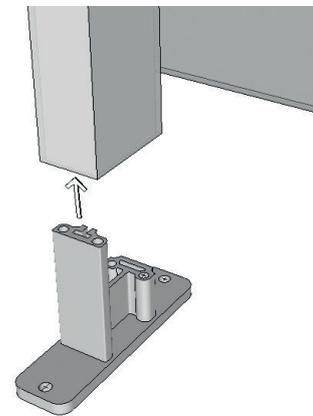

2. Install all sections

Set out the other sections. Continue as per the same principle until all sections are in position.

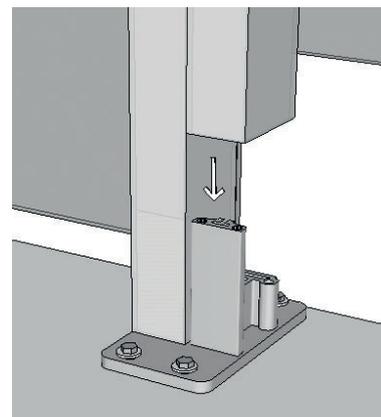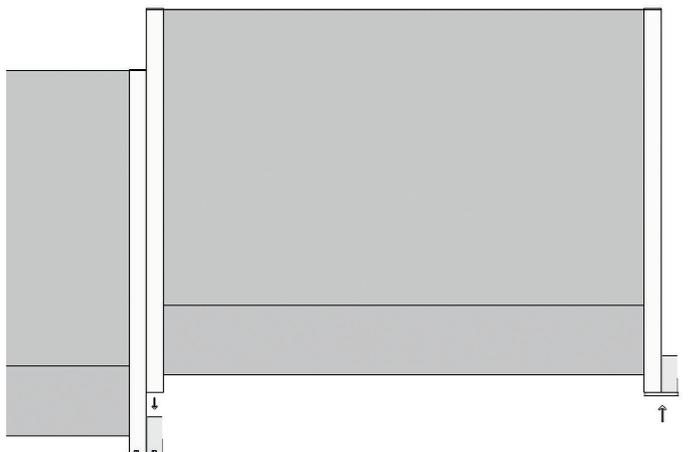

Technical specification

Description	Glass balustrade
Safety	The glass is safety glass - toughened.
Manufacturing method	Structural glazing is used to fit the glass to the aluminium posts
Baseplate mounts	As standard there are baseplate mounts which are double, single and side baseplate mounts.
cover caps	cover caps are available as double and single mounts
Material	Glass, aluminium and stainless steel
Glass	Toughened glass 8 mm
Height	1100 mm
Width straight section	Max 2000 mm
Surface treatment	Natural anodised as standard. As an option at an additional charge, black anodised or powder coated in an RAL colour (only fixed posts)

Use

MAINTENANCE

In order for stainless steel details (the cover cap) to maintain their appearance they should be polished annually.

Warranty

In order for the warranty to be valid the conditions A-C must be met:

A: When invoking the warranty, the seller must be contacted to assess the complaint with regard to the warranty. The seller must confirm that the fault is of such a nature that it is covered by the warranty. All interventions or measures on the product that do not go through ErgoSafe's complaints department invalidate the warranty and are entirely the responsibility of the person who has performed or ordered the work.

B: When invoking the warranty, the product's serial number must be stated as well as any pictures that clarify what is being claimed on the warranty.

C: When exchanging parts, these must unconditionally be returned to the seller. If this does not occur, the customer loses the right to warranty compensation.

The warranty does not cover: Incorrect installation or a settlement in the ground or timber structure.

Dismantling

When dismantling CiU Fixed

Note!

Risk of cuts

Exercise care when handling glass. The product consists of thermally tempered glass that, in the event of incorrect handling, can break and cause injuries.

MATERIAL RECYCLING

All metals are sorted in containers for metal.

Plastic and rubber are sorted as inflammable materials.

Glass is sorted as filling material.



FLEXIBLE GLASS SOLUTIONS

ErgoSafe AB | Reparatörgatan 1 | SE-302 62 Halmstad | +46 (0)10-480 47 00 | www.ergosafe.se